# **Technical Delivery Specification**

E06 – Electrical Systems and Controls





#### This document describes the requirements for the delivery and documentation of systems.

#### **Revision status:**

This delivery regulation E06 replaces all previous regulations.

Version:	Site/s:	Description of the revision:	Date:
E01	Complete	Created	01.03.2005
E02	Complete	Revised	01.05.2010
E03	Complete	Revised	31.07.2013
E04	Complete	Revised	31.07.2013
E05	7, 9, 14, 16	Revised	24.01.2018
E06	Complete	Revised	28.02.2024

Responsible:	Hirschmann Automotive
Department:	T_TPM

Copyright © 2022

All rights reserved.

Reprinting, including excerpts, is only permitted with the approval of Hirschmann Automotive GmbH.



# **Table of Content**

1	Ger	neral		
	1.1	Area of Application	.6	
	1.2	Deviations	.6	
	1.3	Regulations, Norms, and Industry Standards	.6	
2	Ene	rgy Supply	.7	
	2.1	Operating supply voltage	.7	
	2.2	Mains connection	.7	
	2.3	Connection interfaces	.7	
	2.4	Fuse	.7	
	2.5	Main switch	.7	
	2.6	Supply voltage	. 8	
	2.7	Faults	. 8	
	2.8	Power supply connector	. 8	
3	Con	trol cabinet and switching devices	. 8	
	3.1	Equipment	. 8	
	3.2	Size, arrangement and implementation of control cabinet	.9	
	3.3	Space reserve	.9	
	3.4	Space distribution	.9	
	3.5	Touch-proof equipment	.9	
	3.6	Operator equipment accessibility	10	
	3.7	Mounting plate	10	
	3.8	Control cabinet/machine lighting and service sockets	10	
	3.9	Control cabinet cooling	10	
	3.10	Type plate	10	
4	Inst	allation	11	
	4.1	Potential equalization / shielding	11	
	4.2	Protective earthing and protective equipotential bonding	11	
	4.3	Safeguarding connector systems	11	
	4.4	Three-phase current connector systems	11	
	4.5	Control voltage	11	



	4.6	Control circuit earthing		12
	4.7	Valv	Valves	
	4.8	Metal screw connections		12
	4.9	Safe	ety equipment	12
	4.9	.1	Protective locks / protective doors	12
	4.9	.2	Emergency stop / in case of failure	12
5	Op	eratio	nal equipment	13
	5.1	Ger	neral equipment	13
	5.1	.1	Overload and short-circuit protection	13
	5.1	.2	Types and designs	13
	5.1	.3	Accessibility	13
	5.1	.4	Labelling	13
	5.1	.5	Labelling outside the control cabinet	14
	5.1	.6	Equipment labelling	14
	5.1	.7	Rotary table drive	14
	5.1	.8	Three-phase motors operation	
	5.1	.9	Safeguards and relays	14
	5.1	.10	Fuse	15
	5.2	Con	trol Systems	15
	5.2	.1	I/O level	15
	5.2	.2	Buffer battery	15
	5.2	.3	Control systems	15
	5.2	.4	SPS Programs	15
	5.2	.5	Standstill	15
	5.2	.6	Operational equipment error messages	16
	5.2	.7	Set-up mode	16
	5.2	.8	Data backup	16
	5.2		Languages	
	5.3	Con	nmand and reporting devices	16
	5.3	.1	General	16
	5.3	.2	Status and error indicators	
	5.3	.3	Differentiation	17
	5.3	.4	Operating elements	17
	5.3	.5	Lamp test	17



	5.3	.6	Light displays	17
	5.4	Sen	sors	18
	5.4	.1	General	18
	5.4	.2	Switch state	18
	5.4	.3	Moving cables	18
	5.4	.4	Light conductor amplifier	18
	5.4	.5	Reed contacts	18
	5.4	.6	Limit switch	18
	5.4	.7	Cylinders	19
	5.4	.8	Analogue sensors	19
	5.4	.9	Optical Inspection Systems	19
	5.4	.10	PC use	19
	5.4	.11	Component Suppliers	20
6	Wir	ring a	nd cabling	21
	6.1	Ger	neral	21
	6.2	Alig	nment of the lines	21
	6.3	T-di	stributor and Y-distributor	21
	6.4	Net	working	22
	6.5	Terr	minals	22
	6.6	Wiri	ng inside housings	22
	6.7	Wiri	ng outside housings	22
	6.7	.1	Cable entries	22
	6.7	.2	Plug connectors	22
	6.8	Flex	kible cables	23
	6.9	Моу	/ing cables	23
	6.10	Cab	le designation	23
	6.11	Cab	le colors	23
7	Oth	ner		24
	7.1	ESE	D	24



# **1 General**

# **1.1 Area of Application**

This Hirschmann factory standard specifies the delivery regulations for the electrotechnical equipment of machines, machinery systems and production facilities.

### 1.2 Deviations

Deviations from this delivery specification which may appear necessary or appropriate to the manufacturer, require written approval from Hirschmann Automotive.

# **1.3 Regulations, Norms, and Industry Standards**

In addition to the requirements specified in this technical delivery specification, the contractor is fully responsible for all requirements applicable to their service arising from regulations (e.g. EC directives, regulations and other applicable laws) as well as from standards and generally accepted rules of technology, even if this technical delivery specification does not specify such in detail.

As far as regulations, standards and technical rules are referenced in this technical delivery specification, the contractor themselves must check whether they are applicable for their work and whether other regulations, standards and rules are also to be adhered to.

If in doubt, the contractor must immediately contact the client.

In addition, the contractor shall immediately notify the client if the contractor recognises or identifies, on the basis of their knowledge, that the service to be rendered by the contractor is not suitable for the intended purpose or suited only to a limited extent.



# 2 Energy Supply

# 2.1 Operating supply voltage

The standard operating supply voltage is 230/400V 50 Hz / 50 Hz (+- 10%) in the TN-C-S system. Furthermore, different supply concepts can exist (e.g. installation location, Mexico 230/400V 60 Hz +- 10%), which must be clarified in advance.

# 2.2 Mains connection

Terminal blocks must be provided for the main connection up to 240 mm<sup>2</sup>. Watch out for clockwise field of rotation. The equipotential bonding must be brought together at a central point.

Principally, a 5-conductor connection (TN-S network) is to be provided. A connection between N and PE in the machine/mechanical system is not permitted. All terminals must be labelled with L1, L2, L3, N and PE. External conductor terminals and N conductor terminals must be labelled as live (cover, voltage warning message).

# 2.3 Connection interfaces

The interface between peripheral device and the machine/machinery must first be clarified with the client.

# 2.4 Fuse

The expected electricity consumption and the output of the machine are to be made known to Hirschmann Automotive no later than 3 weeks before delivery.

# 2.5 Main switch

Every machine/mechanical system must be equipped with a mechanically actuated, lockable main switch.

Door couplings are not permitted, or the switch lever must be firmly connected to the switch element. The main switch must be lockable in the "OFF position".

The switch must be red with a yellow background when it takes on an emergency stop function.

The control cabinet must be able to be opened at any position of the main switch (OFF/ON).



# 2.6 Supply voltage

An automatic start-up of the controller must take place after failure and restoration of the supply voltage, so that all configuration parameters are restored automatically without operator intervention, without initiating a start of the machine/mechanical system (processing/movement). A failure of the supply voltage may not lead to data loss. If a rechargeable battery or a battery is used for data retention, its voltage is to be monitored and visualized.

# 2.7 Faults

After voltage interruptions and failures as well as after system faults, the program must be able to continue correctly. The means of production must be able to continue a cycle further in home position with the command device.

# 2.8 Power supply connector

Power supply units are not permitted to be connected to the ground machine.

# **3 Control cabinet and switching devices**

# 3.1 Equipment

Within a machine/machinery the same equipment is always to be implemented, i.e. no assemblies or components of the same function from different manufacturers can be implemented.

Only assemblies, components, devices and process materials according to the client's approved list can be used. They may only be installed in their original state. Impermissible, for example, is the drilling out attachment holes, removal of housing parts, changing shaft ends and modification of circuits.

The construction and installation regulations of the device and system manufacturer must be kept. Assemblies, components, and devices which require inspection must be made known to the client and listed in System Overview List. Testing deadlines must be discussed with the client (e.g. the testing of pressure vessels, power sensors, etc.). All equipment is to be selected by the contractor and designed so that it can be connected to the given local networks without special precautions - despite voltage fluctuations and interference pulses occurring - and be fully functional.



# 3.2 Size, arrangement, and implementation of control cabinet

The size and arrangement of the control cabinet must be coordinated with Hirschmann Automotive during design engineering.

The control cabinet has to be in the colour light grey (RAL 7035). If this is not possible, the control cabinet should be painted in the machine colour.

IP 54 is required as the minimum protection type.

For door seals, oil-resistant sealing material must be used.

The closure system "Doppelbart 5" is required.

To store the circuit diagram, a suitably dimensioned circuit diagram folder is to be provided.

With free-standing control cabinets, the electrical connection between control cabinet and machine must be implemented as pluggable.

# 3.3 Space reserve

The control cabinets are to be dimensioned so that for the devices of the individual function

groups (equipment, terminal strips, cable ducts, I/O level, etc.) at least a 20% space reserve is available.

Control cabinet doors generally are only considered a space reserve when an attachment for equipment is also provided.

# 3.4 Space distribution

The control cabinet may only contain electrical equipment. They are to be stored clearly arranged and in conjunction with their function, appropriately and in agreement with the layout plan. Swivel frames are only permitted if the opening angle is greater than 110° and tipping over of the non-attached control cabinet is ensured with the frame swivelled out.

Access to the components behind the swivel frame must be ensured.

# 3.5 Touch-proof equipment

Only touch-proof equipment may be used. If despite this

covers should be necessary, transparent materials (e.g., Polycarbonate) are to be used.



# 3.6 Operator equipment accessibility

Equipment which is placed in the control cabinet but requires configuration by the operator must be adjustable without opening the control cabinet.

# 3.7 Mounting plate

Only solid mounting plates with wiring channels (slotted channels) are permissible as wiring systems.

# 3.8 Control cabinet/machine lighting and service sockets

Inside the control cabinet, a Schuko socket with Fi 230V 16A must be available as well as lighting and be connected before the main switch. Location-specific exceptions must be agreed with the client.

Energy-saving LED machine room lighting is to be installed/in-built; this must be able to be switched on/off via the HMI.

The energy-saving LED control cabinet lighting must be switched per control cabinet field via its own door contact switch.

# 3.9 Control cabinet cooling

The temperature in the control cabinet over the control and drive components and operating fields may not exceed 40 °C. The regular ambient temperature in the hall must be clarified with the client; possible temperature peaks and location-specific conditions (elevation, solar radiation, etc.) are to be considered.

The temperature in the control cabinet and the operating fields must be monitored, and if the permitted temperature (40 °C) is exceeded it must be displayed as a fault message. It may never exceed the maximum value of 45 °C. The control cabinet fan must be temperature-controlled so that it only operates from a threshold. (Energy Efficiency)

Faults on cooling devices must be monitored and reported to the central control system. Air conditioners are to be equipped with a pre-filter.

# 3.10 Type plate

A type plate with the electrotechnical data is to be attached to the control cabinet.



# **4** Installation

# 4.1 **Potential equalization / shielding**

The potential equalization must be carried out at a central point and executed in accordance with EMC guidelines.

Shielding of signal lines must take place close to devices and may not be used as potential equalization. All separate machine and system parts are permitted for the purpose of potential equalization and ESD protection and are to be permanently conductively connected together.

Control cabinet doors, apertures, mounting plates and mounting frames are to be included in the protective measures.

# 4.2 Protective earthing and protective equipotential bonding

All installations and switching systems are to be designed, according to their construction, against indirect contact with live parts by protective measures "protective earthing and protective potential equalization" using the TN-S system.

# 4.3 Safeguarding connector systems

A circuit breaker is to be used for connector systems over 32A.

For a connector system up to 32A, protection against direct contact with live parts, a circuit breaker with residual current protection (FI-LS, 30 mA, according to the equipment installed, min. Type A at least) is to be used.

### 4.4 Three-phase current connector systems

Only three-phase connectors of type CEE (16A/32A, 5-pin, 6h) are to be installed.

# 4.5 Control voltage

The control voltage for PLC, initiators, light barriers, valves, magnets etc. must be 24V DC.

The control voltage for measuring devices is to be supplied via separate power supplies. Safety extra-low voltage (SELV) or protective extra-low voltage systems (PELV) are to be installed.



# 4.6 Control circuit earthing

The control circuit earthing may only be undertaken with an earthing separation terminal.

# 4.7 Valves

All hydraulic and pneumatic valves are to be provided with valve protection circuit and LEDs. May be operated at max. 24V DC.

# 4.8 Metal screw connections

Metal screw connections are not permitted in plastic housings.

# 4.9 Safety equipment

Safety equipment must be designed so that it cannot easily be bypassed. Doors or the like which enclose the internal safety circuit are to be fitted with safety switches. If the inner safety area can be entered and it is possible to close the safety circuit behind a person, this area must additionally be queried by pressure sensitive mats, laser scanners, etc.

#### 4.9.1 Protective locks / protective doors

Protective doors to moving equipment (e.g., robots, portals, etc.) are to be provided with a control switch with an interlock. Principally, contact-less door safety switches (locking devices) are to be used. Manual unlocking must be possible in case of an emergency. Moving protective doors as access points for maintenance are to be secured in closed state by a safety switch.

Protective doors which are opened and closed during each working cycle, are to be secured by safety switches.

#### 4.9.2 Emergency stop / in case of failure

The emergency stop control device must be red. If a background is present behind the control device and if it feasible, it must be yellow (also applies for fixed wired or pluggable hand operating devices).

The "Emergency stop" command for PLC control is reported and displayed in detail.



# **5 Operational equipment**

# 5.1 General equipment

#### 5.1.1 Overload and short-circuit protection

To protect against overload and short-circuits, a circuit breaker is to be provided (fuse less) from a current strength of 32A.

With general three-phase circuits, three-pole circuit breakers are to be used.

For motor/engine circuits up to 100A, a motor protection switch is to be used.

From a current strength of 35A, an NH fuse switch disconnector is to be provided.

#### 5.1.2 Types and designs

In general, standard types and standard designs of the equipment are preferable for use.

If special types of equipment (e.g., sensors, actuators, etc.) are used, these must be agreed with Hirschmann Automotive. An offer must be provided for corresponding spare parts.

#### 5.1.3 Accessibility

The equipment arrangement must be clear and appropriate. All equipment must be easily accessible in consideration of maintenance.

#### 5.1.4 Labelling

All equipment in the control cabinet and on the machine or system must be labelled via badges in printed form, identical with the equipment labels in the circuit diagram. The labelling is to be carried out double (one the equipment and on the cable or on the mounting plate) and must be legible without removing covers. In the case of plug connections, labelling must be provided on both sides. The identification plates may not be attached to interchangeable components, assemblies, or devices. When marking the components installed in the machine/machinery, the following information must be observed:

The device identifications have to be repeated on the corresponding panels and covers.

Rotation arrows must be attached to all pumps and motors.

Labelling signs must principally

- be engraved, printed or etched on aluminum/plastic
- have good legibility
- be permanently attached to a well visible point (permanently)



- be attached next to the components, assembles and devices
- for covered installed devices be attached next to the installation space.

#### 5.1.5 Labelling outside the control cabinet

The equipment labelling outside the control cabinet must be attached via engraved/stamped or etched badges permanently, undetachable, without gaps and well visible next to the component and on the cable. This also applies for plugs, switch boxes, command boxes and operating elements.

All electrical installation spaces must be marked with a warning sign (electrical voltage warning).

#### 5.1.6 Equipment labelling

The equipment labelling inside the control cabinet must be provided on the mounting plate and on the component so as to be clearly visible.

The naming and symbols are to be adapted according to the standard.

A consistency/similarity of the labelling which makes sense must be ensured between

sensor/actuator levels and PLC controller.

Component identification or location markings must be location.

#### 5.1.7 Rotary table drive

Servo drives may only be controlled by frequency converters. Three-phase motors with an output of 7.5 kW or above must preferably be designed with an electronic soft start. For an output of up to 4 kW, the connection must take place via a plug connector. The start-up conditions are to be agreed with the responsible specialist department of the client.

#### 5.1.8 Three-phase motors operation

Three-phase motors should principally be operated with frequency converters.

Direct switching on of loads over 3 kW with switch or safeguard is not permitted. A star-delta start-up is only permitted up to maximum of 10 kW.

#### 5.1.9 Safeguards and relays

Safeguards and relays which switch in every machine cycle must be designed in semiconductor technology.



#### 5.1.10 Fuse

The power supply must be divided into 3 groups, each of which must be fused separately:

- CPU, HMI, PC systems, network components
- Sensors, bus electronics, measurement amplifiers
- Actuators

# 5.2 Control Systems

#### 5.2.1 I/O level

For the inlet and outlet levels, only short-circuit proof equipment in semi-conductor technology with potential isolation (optocoupler) may be used.

#### **5.2.2 Buffer battery**

A voltage failure with empty buffer battery may not cause any program loss. Lowering of the buffer battery voltage is signaled via a message text in the display.

#### **5.2.3 Control systems**

Siemens and Beckhoff controllers are preferably to be used.

If another manufacturer is used, this is to be reported to Hirschmann Automotive.

#### **5.2.4 SPS Programs**

PLC programs must be executed in a language defined in the EN 61131 standard. Preferably in LD and ST.

Programs must be annotated in English, and each function must be accompanied by a comment briefly describing.

Places where the program function is not immediately visible must also be commented on.

Variables are to be designated by descriptive names. If there is an internal style guide for programming, it must be attached to the source. Overall, the program must be designed in such a way that the function is comprehensible to a specialist after a short training period.

#### 5.2.5 Standstill

Undefined standstills without corresponding operating of fault messages may not occur at any time during operation. In the event of a loss of power, it must be ensured that there is no risk of collision when the system is put back into operation. After a fault, the machine/mechanical system must come to a standstill in a defined state (if technically safe to do so).



#### 5.2.6 Operational equipment error messages

Equipment with error messaging contacts must be wired to all contacts of the higher-level control unit and visualized.

#### 5.2.7 Set-up mode

Movement processes which could lead to collisions or dangerous situations are to be prevented in set-up mode by corresponding technical program locks.

The set-up mode must allow the option to type in the sequence steps from individual stations and the whole machine. While doing so, it is to be ensured, that also for longer actuation only one cycle per actuation is executed (edge evaluation). Returning to automatic mode may only be possible when a starting position is available.

Another option of the set-up mode must be the movement of single actuators (e.g. cylinder) via buttons and the associated lights (e.g. working position/ starting position) and the movement of axes and robots (POS, JOG, REF, etc.) on the operator panel. Returning to the "automatic" operating mode may only be possible with restored starting position, or it must be ensured that no collision occurs by processing the positions on the modules.

Furthermore, it must also be possible to carry out a controlled home position movement.

#### 5.2.8 Data backup

Data backups and parameter lists are to be supplied for all devices which are configurable via software (e.g., controllers, frequency converter, temperature controller, etc.).

If a PC is in use, a complete backup (status: final acceptance) of the hard disk is to be supplied.

#### 5.2.9 Languages

HMI texts and messages, as well as machine labels, must be carried out in the national language of the place of use and in English. It must be possible to switch this in the machine program by means of a soft key.

# 5.3 Command and reporting devices

#### 5.3.1 General

Command and reporting devices must be easily reachable without danger from the operator's position. If reporting devices can not be reached, they must be visible. Command devices for



starting the system must be instructed and arranged so that they cannot be accidentally actuated.

Status displays (e.g.: illuminated buttons) are to be placed in the visual field of the operating personnel, they should give information about the insertion readiness and OK/nOK parts.

The machine may not at any time go into standstill without a message; there must be a corresponding message for each situation. Error/fault messages must always be output in clear text, error codes are not permitted.

#### **5.3.2 Status and error indicators**

In the case of machines/machinery, production cells, interlinked systems, assembly systems, etc., the operating state must be indicated by means of a clearly visible signal light:

- Red (flashing light): fault indicators (e. g. machine standstill due to an electrical or mechanical fault, "emergency stop" actuation)
- Yellow (continuous light): machine standstill due to missing start requirements (e.g., set-up mode, maintenance, missing workpieces, tool change)
- Yellow (flashing light): warning, machine standstill impending due to e.g., missing workpieces in flow, minimum stock level reached
- Green (continuous light): machine running in automatic mode, normal mode
- Green (flashing light): machine/mechanical system is in automatic mode, whereby the start conditions are available.

The attachment of the signal lights is to be agreed with the client. The sequence of the colours from top to bottom is red – yellow – green.

#### **5.3.3 Differentiation**

A clear differentiation must be made between fault and operating messages.

#### 5.3.4 Operating elements

The number of operating elements (button for hand functions) must be low, but known operating elements which are to be pressed often are to be designed as hardware buttons.

#### 5.3.5 Lamp test

All optical and acoustic displays must be able to be tested for function during operation via a lamp test.

#### 5.3.6 Light displays

Only LED inserts are to be used for light displays.



# 5.4 Sensors

#### 5.4.1 General

All sensors must be pluggable and must be checked for switch changes during every machine cycle.

Sensors for measuring devices must be designed in a way that the measuring results can't be failed.

#### (e.g. vibrations, motions,).

Distributor boxes, terminal boxes and sensor distributors are to be collected in groups and arranged in accordance with the single stations or assemblies of the system. All sensors must be checked for switch change during each cycle. In case of a missing signal change, a fault message must occur with the corresponding sensor identification.

#### 5.4.2 Switch state

An LED for the switching state of the sensor must be present on the sensor and on the connection socket (for example, sensor-actuator distributor).

#### 5.4.3 Moving cables

It is to be ensured that moving cables must be fundamentally pluggable on both sides and designed to be highly flexible. Distributor boxes may only be attached to non-moving components. Exceptions are sensor modules with a highly flexible supply cable.

#### 5.4.4 Light conductor amplifier

Optical sensors must not interfere with one another.

#### 5.4.5 Reed contacts

Reed contacts are not permitted for magnetic field sensors.

#### 5.4.6 Limit switch

The limit switch of an actuator (e.g., cylinder) must be monitored.

The movements of the actuators are to be designed as time-monitored (timeout).

All limit switches must be checked for switch changes during each machine cycle.

If the sensors for start position and work position are actuated at the same time, a fault message must be displayed. Due to the mechanical construction of the actuator, it is possible that both limit switches are briefly actuated during switchover. In this case, a delayed initiation of the fault is to be programmed.



All limit switches must be checked for the status change in the corresponding sequence steps. This function is tested during the preliminary acceptance of each sensor.

#### 5.4.7 Cylinders

Preferably use cylinders with a C, T, or trapezoidal groove.

#### 5.4.8 Analogue sensors

All sensors which convert a non-electrical analogue signal into an electric signal must be equipped with a digital measurement indicator (PE-converter, vacuum switch, etc.).

#### **5.4.9 Optical Inspection Systems**

#### Structure:

The mounting of the system must be designed in such a way that the alignment and positioning of the system can be easily restored during assembly/disassembly. (e.g., using dowel pins, fixed stops, guides)

Manually adjustable components (focus, iris, zoom) must be easily accessible and adjustable when installed.

Components that need to be cleaned (lenses, optics) must be accessible for cleaning without having to dismantle the entire system.

Software:

A fixed feature must be checked on the machine during each cycle. (Detection of misaligned system: focus, exposure, aperture, position)

In the event of an error, the system must be stopped.

Quality criteria should not only be evaluable as an overall result, but also as individual results (e.g., coding, tab, seal)

Include a description of the test sequence (which tools for which criteria, test sequence)

Basically, everything is adjustable (add models, change parameters) if realizable with reasonable effort (must be clarified with Hirschmann Automotive)

Reference images must be made available which were used to create the test program. (target/actual comparison possible)

#### 5.4.10 PC use

If PCs are used, they must be industrial PCs. The PC may not be exposed to any vibrations, and it is to be provided with an uninterruptible power supply (UPS system).



#### 5.4.11 Component Suppliers

The materials approved and proposed by the client must be available from the material manufacturer for at least 10 years from the date of commissioning/ordering. It is forbidden to use equipment which has been discontinued where alternatives are available. The equipment shall be tested by the contractor before installation.

Material manufacturers who are not on this list may only be used in consultation with the client after written approval.

Control cabinets:	Rittal (standard colour RAL7035)
Main switch:	EATON, Kraus-Naimer
Command and reporting devices:	EATON RMQ-Titan (IP65 / 22.5mm),
Key switch:	EATON RMQ-Titan (Code MS1)
Programmable controllers:	Siemens, Beckhoff
Displays:	Siemens, Beckhoff
Main and auxiliary contacts:	EATON, Siemens
Terminals:	Weidmüller, Phoenix, Siemens, Wago
Drive systems:	Danfoss, SEW, Siemens, Berger Lahr, Kollmorgen SERVOSTAR, Bosch Rexroth, SEW, Festo, Wittenstein, Keba
Valve islands:	Festo, SMC
Magnetic field sensors:	Balluff, Baumer, Festo, Schunk, IFM, Sick, SMC
Proximity sensors:	Balluff, Baumer, Bernstein, IFM, Sick, SMC
Light sensors:	Keyence, Wenglor, Baumer, Sick, Omron, Sensopart
Camera systems:	Cognex, Keyence, Teledyne Dalsa, CCS
Safety components:	Pilz, Schmersal, Sick, Euchner, Siemens, Keyence
Plug connectors:	Harting, Mennekes,
Rotary tables:	Fa. Weiss
Linear transfer systems:	Taktomat
Markinglaser:	Panasonic (LP-ZV), Keyence UV-Laser MD-U1000C
Codereader:	Keyence, Datalogic, Leuze
3D-Scanner	Keyence, SmartRay
Frequency control devices:	REOVIB (MFS168 6A)
	RNA (WaCo B.7/65.2-V1)



# 6 Wiring and cabling

# 6.1 General

Each device is to be connected from the control cabinet or a terminal box with a separate, flexible line or cable. No wiring (or cables) may be passed through from device to device.

Neutral and protective conductor outlets must be clearly assigned to each cable.

Reserve inlets and outlets are to be lead to terminals.

Conduits in and on the ground are to be avoided.

The EMC guidelines must be heeded for the conduits.

Inductive and capacitive interference of disturbances (e.g. from power converter, contactor coils, controlled drives, transformer and its lines, etc.) may not cause any impairment of the PLC or sensors.

It is to be considered that control cabinets can be set up near on-site cable lines which are external to the machines.

For analogue signals, interfaces and bus cable shielded lines are to be used in accordance with the manufacturer's specifications.

The installation guidelines of the controller manufacturer are to be kept.

Good accessibility is to be ensured to the devices. Changing of assemblies and components as well as the removal of covers must be possible without dismantling other components.

# 6.2 Alignment of the lines

Data, bus and measuring lines must be laid separate from the usual power lines or shielded accordingly.

# 6.3 T-distributor and Y-distributor

Multiple assignments of connectors to terminals of control cabinet assemblies or signal distributor assemblies (e.g., bus module, passive signal distributor, contactors) are not permitted. Distribution of the signals with T and Y-distributor sections or similar is also not permitted due to the clear signal assignment.



# 6.4 Networking

Networking of internal and external equipment such as sensors, actuators, servo-controllers, etc. is to be done via bus systems such as Industrial Ethernet, PROFIBUS or ASI-Bus with conventional wiring.

# 6.5 Terminals

Only spring-loaded technology products are to be used for terminals and terminal strips. They are to be labelled permanently, easily recognizably and in accordance with the circuit diagram.

With the use of screw terminals for other equipment, cable ends must be provided with insulated wires end sleeves or insulated cable lugs.

For all cables from control cabinet to system, a clamping unit is to be provided per cable wire (two wires in one clamping unit is not permitted).

# 6.6 Wiring inside housings

Cables to devices on swivel frames or door inset must be laid with a protective hose.

The wiring of the control cabinets must be designed in channel wiring.

When using wire end sleeves, a design with plastic protective shrouds must be used.

# 6.7 Wiring outside housings

#### 6.7.1 Cable entries

With a cable entry, it must be ensured that no moisture or damage to the cable can occur due to it. Cable bushing systems are permitted. Ready-made cables must be able to be replaced without dismantling the plug.

#### 6.7.2 Plug connectors

Initiators and other peripheral devices are to be designed as pluggable. The switching state must be displayed with LEDs. Replacement of connected cables must be easy to carry out (e.g., in cable drag).

The line length of sensors/actuators with fixed connection lines may not exceed a max. cable length of 1.5 m for good accessibility.

In the event of high stress on the connector cable, irradiated cables, e.g., those with a higher temperature range, must be used.

If several connector devices are used next to one another, accidental switching must be prevented by suitable measures (e.g., connector coding, certain fixed line lengths, etc.).



Up to a rated current of 36A, all connecting cables for the system parts, which must be electrically separated to transport the machine/mechanical system, must be provided with one-sided connector devices.

The design of the section of the energy supply chain is to be documented and the energy supply chain must be plugged in / replaceable as an assembly within a unit of time agreed with the client. Pluggable devices for additional devices (e.g., pumps, filters, measuring controllers, etc.) must be connected behind the main switch.

### 6.8 Flexible cables

Only flexible cables may be used for the wiring and cabling.

Cable types are to be used in accordance with the ambient conditions (resistance to oil, water, coolant, lubricant, solvent, etc.).

# 6.9 Moving cables

For cables which have to be moveable (e.g., energy chain, etc.), special suitable, highly flexible cables with fine wired strands have to be used and their bending radii are to be complied with.

Energy chains must be able to be opened and have a barrier strip between electrics and pneumatics. Also, a reserve of 20% is to be kept in energy chains. The cables may not be bundled together.

# 6.10 Cable designation

Labelling signs with corresponding cable numbers are to be attached to the cable ends.

### 6.11 Cable colors

Permissible cable colours according to EN 60204-1

Cable colours: Protective conductor: GREEN YELLOW Neutral conductor: BLUE Main power circuits alternating or direct current: BLACK Control circuits, alternating current: RED Control circuits, alternating current (earthed line): RED with WHITE Control circuits, direct current: DARK BLUE



Control circuits, direct current (earthed line): DARK BLUE with WHITE

Locking circuits, which are supplied from an external power source (potential-free contacts): ORANGE

Circuits before the main switch: YELLOW / ORANGE

# 7 Other

# 7.1 ESD

As long as the system is planned for use in an ESD area, it must have a defined ESD connection point.